

Installation Instructions



Iveco/Fiat/PSA 2.3/2.8/3.0 JTD Engines– Bluespark Pro + Boost



This product has been designed and manufactured to work correctly with installation as described in these instructions.

Failure to follow these instructions could result in damage to property, damage to the product and or potential injury.

It is very important that you read and understand these instructions thoroughly before installing this product.

Included Contents:

- Tuning Module
- Wiring Loom
- Fastening Ties
- Installation and User instructions
- Protective Bag for Module – (prevents damage to unit casing)
- Jubilee Clip



Before installation:

1. Open the vehicle's bonnet
2. Remove the ignition key
3. Close and lock the doors
4. Wait 5 minutes before removing any electrical plugs



Do not open the vehicle doors or unlock the vehicle while installation is in progress.

Installation Location:

The module should be installed between the vehicle's Rail and Boost Pressure sensors as shown in the diagram.

Locating the Unit:

The unit itself should be mounted away from:




Sources of Extreme Heat



Sources of Vibration



Sources of Spray Water

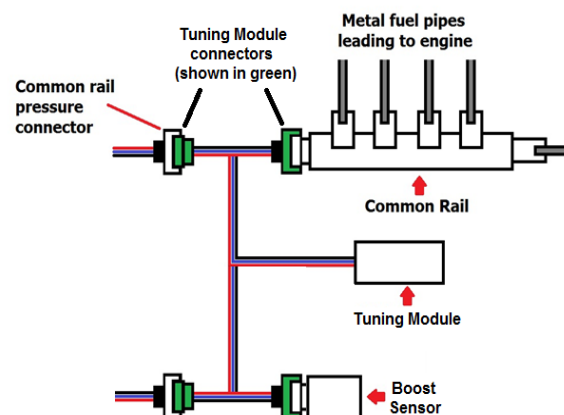

B3-B4-B-032B

Installation Instructions

Bluespark
AUTOMOTIVE

Iveco/Fiat/PSA 2.3/2.8/3.0 JTD Engines– Bluespark Pro + Boost

Introduction



Introduction


- Ensure that your engine looks similar to the supplied photographs (minor changes with ancillary components are to be expected, however if the engine looks nothing alike, please contact Support.)
- Familiarise yourself with the locations of the connectors highlighted.
- Make sure that you have a good grasp of the operation of the connector clips and or locking tabs. - If the connectors you are trying to access are in an awkward place, it may be useful to try unplugging (and then re-inserting) a connector on the vehicle which is more easily accessible. Alternatively try plugging together the connectors on the Tuning Module itself.

Installation Instructions



Iveco/Fiat/PSA 2.3/2.8/3.0 JTD Engines– Bluespark Pro + Boost

Step 1

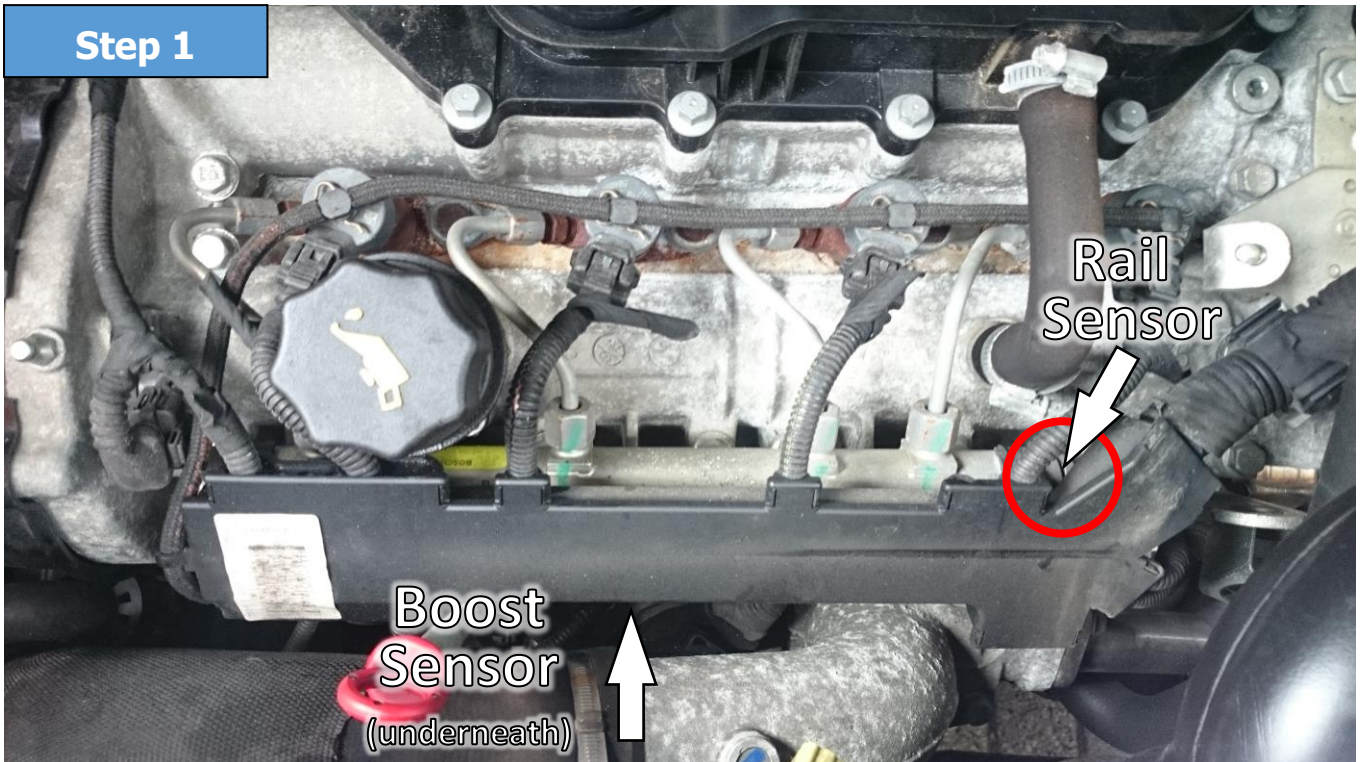

- Remove the plastic engine cover (if present). This usually pulls off with a firm tug. On certain models the cover is secured with bolts. If this is the case, remove the bolts and lift off the engine cover.
- You should be left with an engine that looks similar to the photo above.



General outlook of the fuel rail in a common rail engine

Installation Instructions

Bluespark
AUTOMOTIVE

Iveco/Fiat/PSA 2.3/2.8/3.0 JTD Engines– Bluespark Pro + Boost

Step 2



- To enable better access to the rail sensor, you can move the cable housing that is attached to the fuel rail by giving a gentle tug.
- Unplug the Rail Sensor connector (3 pin) by pressing down the releasing tab and pulling back on the connector
- Insert the connector from the Tuning Module's wiring loom onto the Rail Sensor.
- Insert the Vehicle's Rail Sensor connector into the corresponding connector on the Tuning Module's wiring loom.

Installation Instructions




Iveco/Fiat/PSA 2.3/2.8/3.0 JTD Engines– Bluespark Pro + Boost

Step 3



Jubilee Clip

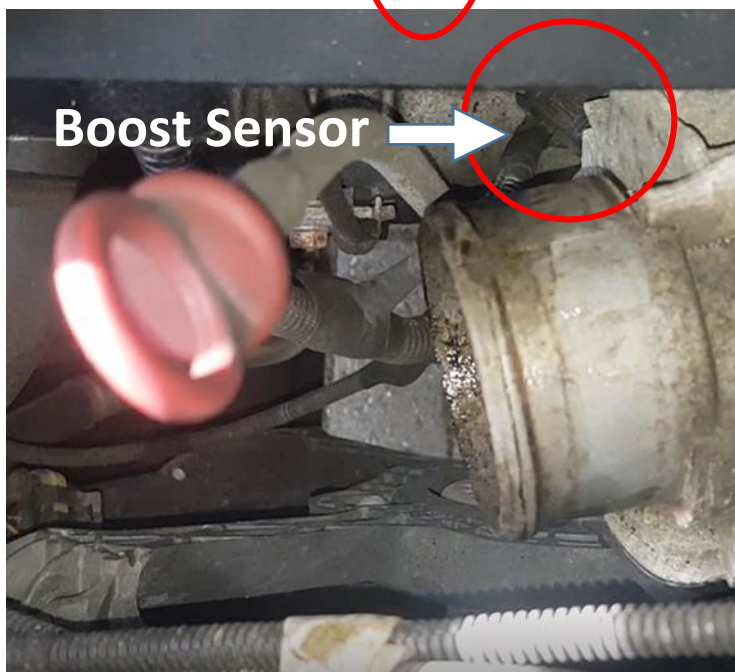

Boost Sensor

Before carrying out this step, check the box to ensure you have been supplied a replacement jubilee clip.


You may be able to access the boost sensor without removing the boost hose. If so, please move on to step 4.

- Use some snips to cut the strap securing the boost hose. Be careful not to cut the hose and do not try to pull the boost hose loose with the strap secured.
- Once the strap is removed, pull back on the boost hose and remove from the inlet manifold.
- You should now be able to access the boost sensor.

Step 4

- Unplug the Boost Sensor connector (4 pin) by pressing down on the releasing tab and pulling back on the connector.
- Insert the connector from the Tuning Module's wiring loom into the Boost Sensor.
- Insert the Vehicle's Boost Sensor connector into the corresponding connector on the Tuning Module's wiring loom.

Step 4

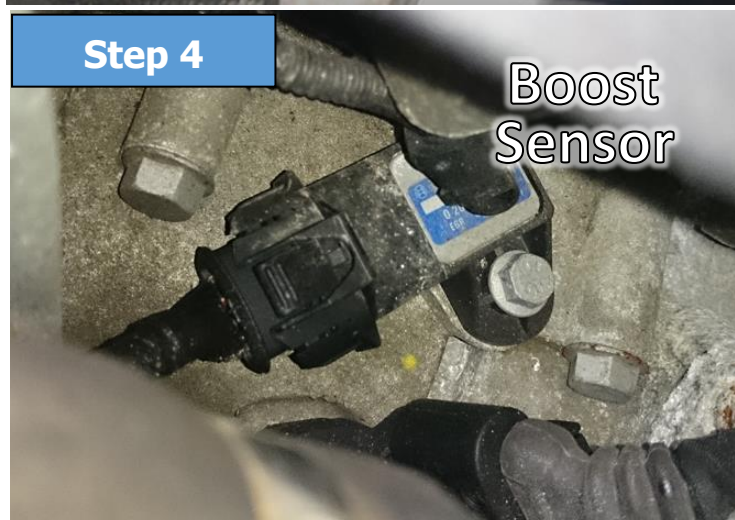


Boost Sensor

Installation Instructions

Bluespark
AUTOMOTIVE

Iveco/Fiat/PSA 2.3/2.8/3.0 JTD Engines– Bluespark Pro + Boost

Step 5

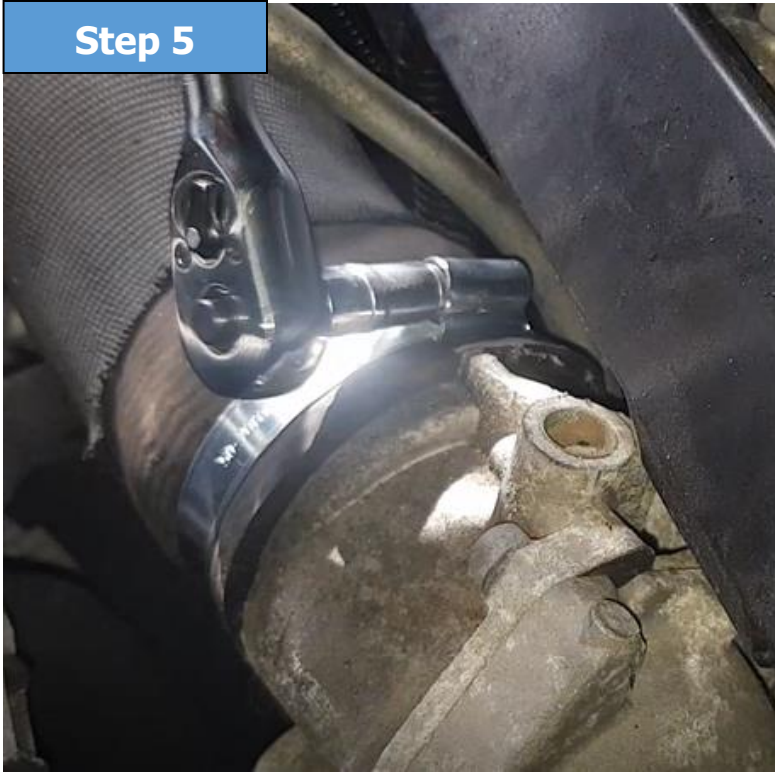

- Push the boost pipe back on the the inlet manifold.
- Use the supplied replacement jubille clip to secure the hose, you will need a 7mm hex socket to tighten the jubille clip. A flat head screw driver will also work but a 7mm hex socket is recommended to prevent the risk of damage.

- Carefully re-install all engine covers that have been removed during the installation process.
- With the unit successfully installed please secure the unit and wiring loom within the engine bay, paying attention to the guidelines highlighted on Page 1.



Route the tuning box wiring harness away from sources of heat (exhaust manifolds, EGR pipes, most stainless steel pipes) and also away from any rotating parts such as belts.

- Double check all connections are correct and firmly connected. If this is the case, start the vehicle and ensure there are no engine warning lights or error messages displayed.

If everything is as it should be, please feel free to take the vehicle out for a test drive and enjoy the added responsiveness and power added to your vehicle by the Tuning Module.