

Installation Instructions



BMW B57 2021+ Engines – Bluespark Pro + Boost SENT



This product has been designed and manufactured to work correctly with installation as described in these instructions.

Failure to follow these instructions could result in damage to property, damage to the product and or potential injury.

It is very important that you read and understand these instructions thoroughly before installing this product.

Included Contents:

- Tuning Module
- Wiring Loom
- Fastening Ties
- Installation and User instructions
- Protective Bag For Module – (prevents damage to unit casing)

Before installation:

1. Open the vehicle's bonnet
2. Remove the ignition key
3. Close and lock the doors
4. Wait 5 minutes before removing any electrical plugs



Do not open the vehicle doors or unlock the vehicle while installation is in progress.

Installation Location:

The module should be installed between the vehicle's Rail and Boost SENT Pressure sensors as shown in the diagram.

Locating the Unit:

The unit itself should be mounted away from:




Sources of Extreme Heat



Sources of Vibration



Sources of Spray Water

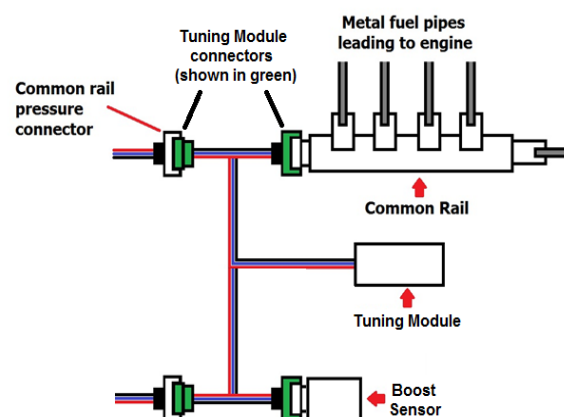

H3-H3sent-Ns-221b

Installation Instructions

BMW B57 2021+ Engines – Bluespark Pro + Boost SENT

Bluespark
AUTOMOTIVE

Introduction



Introduction


- Ensure that your engine looks similar to the supplied photographs (minor changes with ancillary components are to be expected, however if the engine looks nothing alike, please contact Support.)
- Familiarise yourself with the locations of the connectors highlighted.
- Make sure that you have a good grasp of the operation of the connector clips and or locking tabs. - If the connectors you are trying to access are in an awkward place, it may be useful to try unplugging (and then re-inserting) a connector on the vehicle which is more easily accessible. Alternatively try plugging together the connectors on the Tuning Module itself.

Installation Instructions


BMW B57 2021+ Engines – Bluespark Pro + Boost SENT

Bluespark
AUTOMOTIVE

Step 1

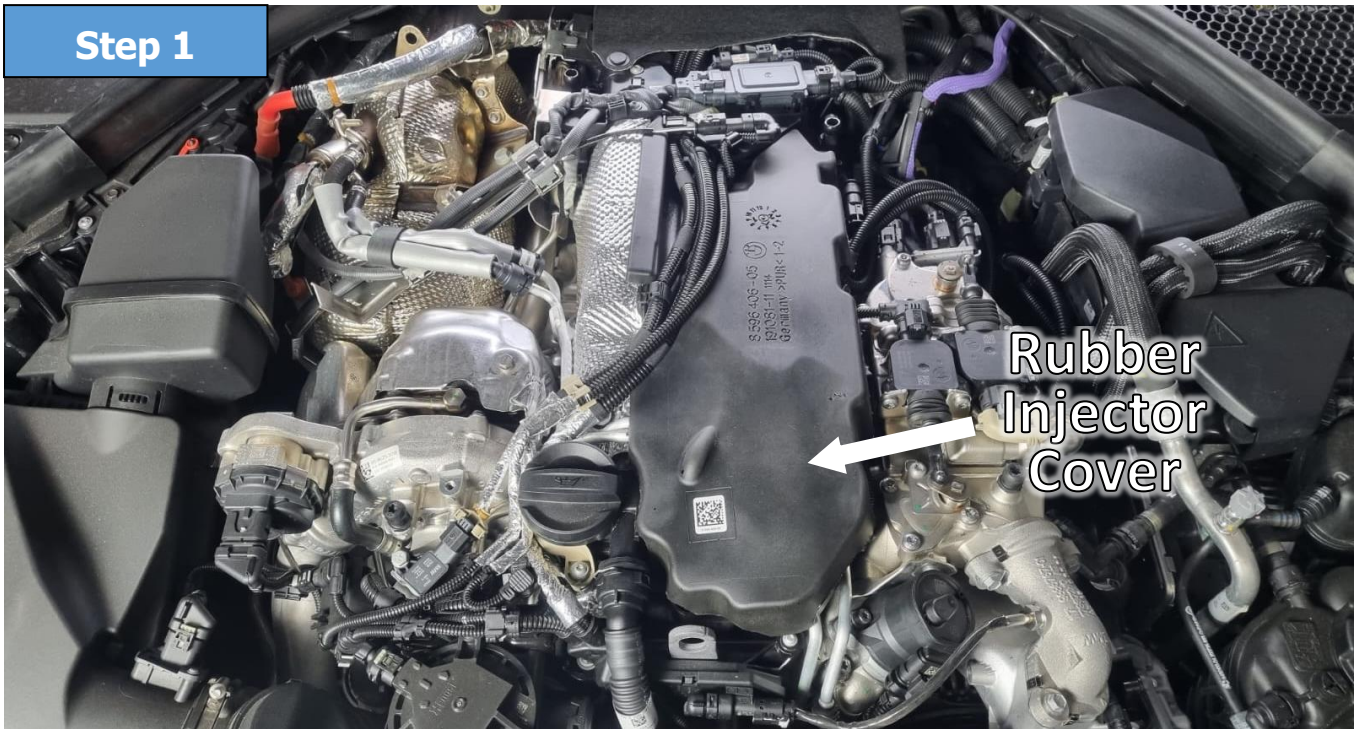

- Firmly tug upwards on the engine cover. This should come off quite easily and can be placed to one side.
- Peel up the rubber injector cover to allow access to the fuel rail. This usually pulls off with a firm tug.

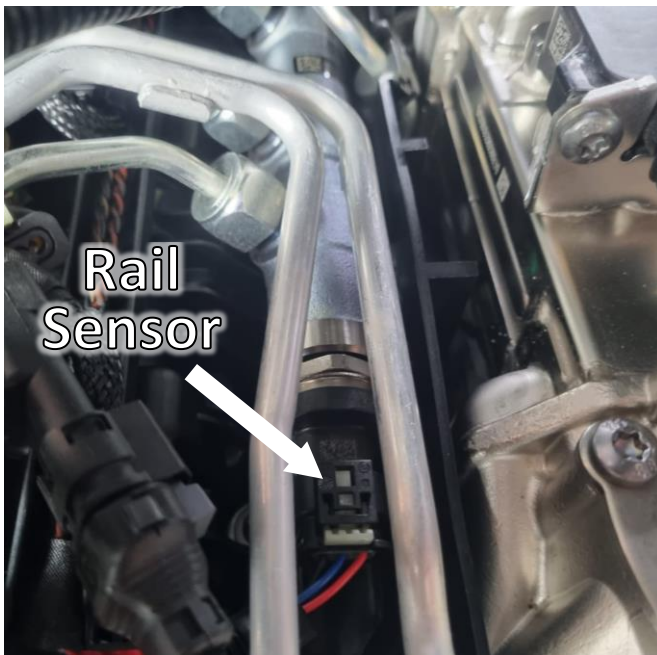


- Unplug the Rail Sensor connector (3 pin) by pressing down the releasing tab and pulling back on the connector
- Insert the connector from the Tuning Module's wiring loom onto the Rail Sensor.
- Insert the Vehicle's Rail Sensor connector into the corresponding connector on the Tuning Module's wiring loom.

Installation Instructions




BMW B57 2021+ Engines – Bluespark Pro + Boost SENT

Step 2

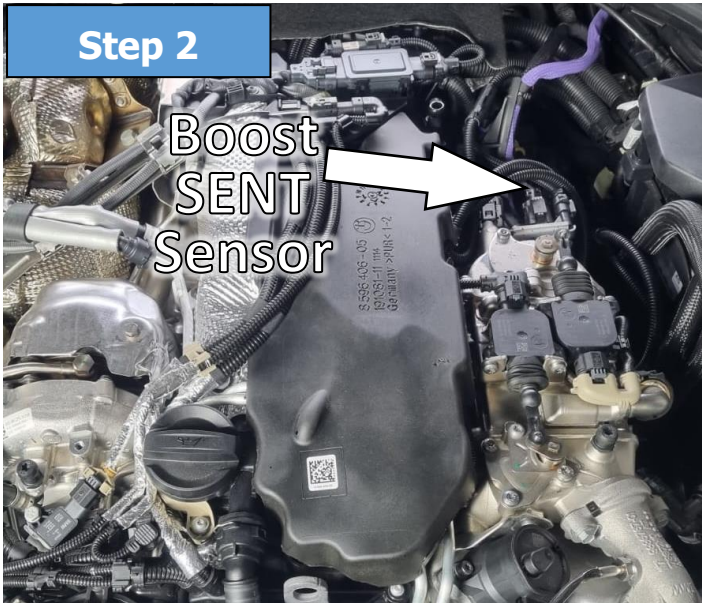

- The Boost SENT sensor will be located on the right-hand side of the engine bay.
- The sensor is located underneath the purple cable as shown in the images to the left.
- To access the boost sensor, first unclip the cable carrier. This is held in place by two clips

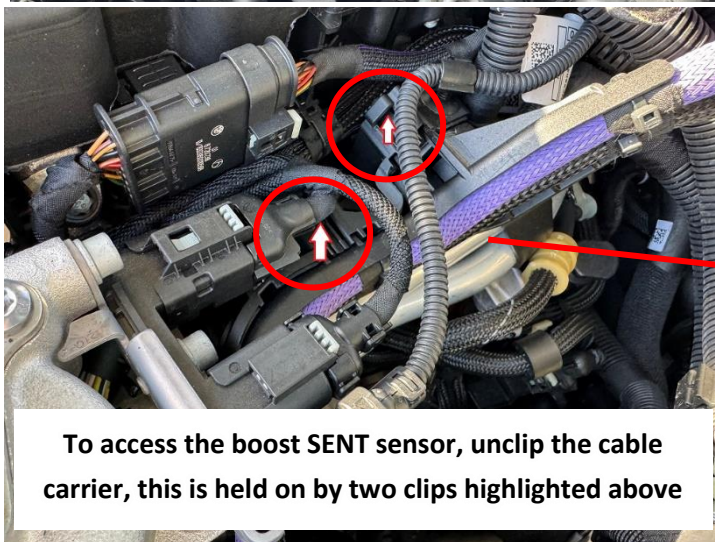

To access the boost SENT sensor, unclip the cable carrier, this is held on by two clips highlighted above



For visual purposes, the purple cable has been removed in this image.

- Unplug the Boost SENT Sensor connector (3 pin) by pressing down on the releasing tab and pulling back on the connector.
- Insert the connector from the Tuning Module's wiring loom into the Boost SENT Sensor.
- Insert the Vehicle's Boost SENT Sensor connector into the corresponding connector on the Tuning Module's wiring loom.

Installation Instructions

BMW B57 2021+ Engines – Bluespark Pro + Boost SENT

Bluespark
AUTOMOTIVE

- Carefully re-install all engine covers that have been removed during the installation process.
- With the unit successfully installed please secure the unit and wiring loom within the engine bay, paying attention to the guidelines highlighted on Page 1.



Route the tuning box wiring harness away from sources of heat (exhaust manifolds, EGR pipes, most stainless steel pipes) and also away from any rotating parts such as belts.

- Double check all connections are correct and firmly connected. If this is the case, start the vehicle and ensure there are no engine warning lights or error messages displayed.

If everything is as it should be, please feel free to take the vehicle out for a test drive and enjoy the added responsiveness and power added to your vehicle by the Tuning Module.