Installation Instructions

VAG 2.0 TDI 135-177PS – CR Tech and Bluespark Pro

Bluespark AUTOMOTIVE

WARNING

This product has been designed and manufactured to work correctly with installation as described in these instructions.

Failure to follow these instructions could result in damage to property, damage to the product and or potential injury.

It is very important that you read and understand these instructions thoroughly before installing this product.

Included Contents:

- Tuning Module
- Wiring Loom
- Fastening Ties
- Installation and User instructions
- Protective Bag For Module – (prevents damage to unit casing)

Before installation:

1. Open the vehicle's bonnet
2. Remove the ignition key
3. Close and lock the doors
4. Wait 5 minutes before removing any electrical plugs

WARNING

Do not open the vehicle doors or unlock the vehicle while installation is in progress.

Installation Location:

The module should be installed between the vehicle's Rail and Boost Pressure sensors as shown in the diagram.

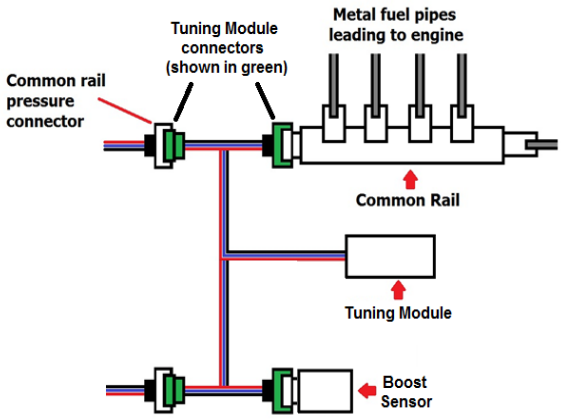

Locating the Unit:

The unit itself should be mounted away from:

Sources of Extreme Heat

Sources of Vibration

Sources of Spray Water

K3-FEP4-Cay-179

Copyright 2013 - Bluespark Automotive Ltd. Unit 23A, Dubmire Ind. Est. DH4 5RJ, U.K. +44(0)191 385 9005

Installation Instructions

VAG 2.0 TDI 135-177PS – CR Tech and Bluespark Pro

Introduction

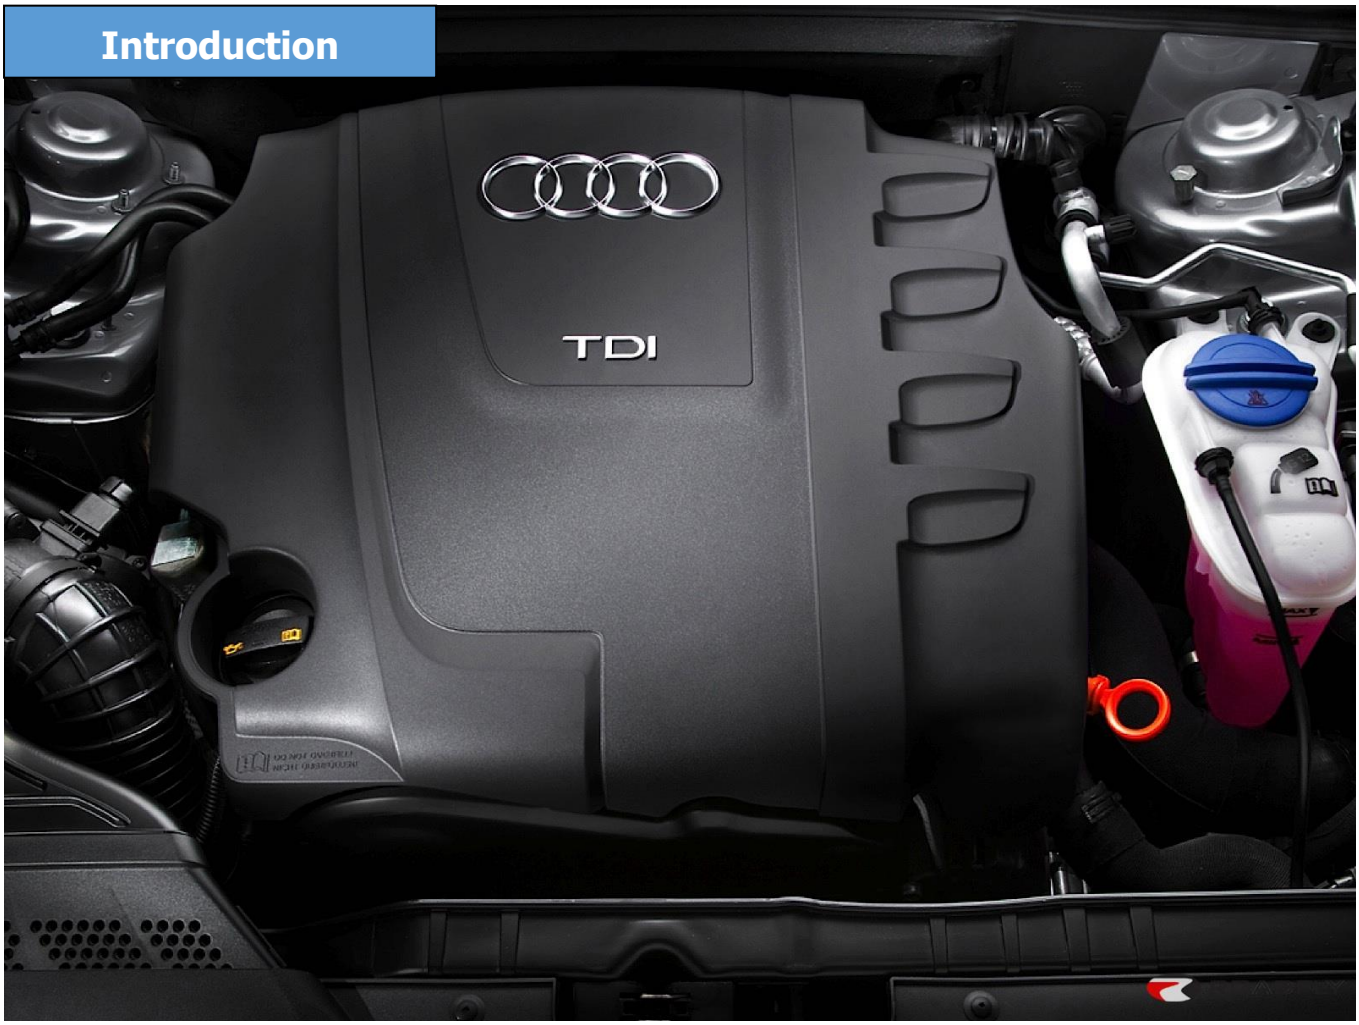

- Ensure that your engine looks similar to the supplied photographs. (minor changes with ancillary components are to be expected, however if the engine looks nothing alike, please contact Support.)

- Familiarise yourself with the locations of the connectors highlighted.

- Make sure that you have a good grasp of the operation of the connector clips and or locking tabs. - If the connectors you are trying to access are in an awkward place, it may be useful to try unplugging (and then re-inserting) a connector on the vehicle which is more easily accessible. Alternatively try plugging together the connectors on the Tuning Module itself.

Copyright 2013 - Bluespark Automotive Ltd. Unit 23A, Dubmire Ind. Est. DH4 5RJ, U.K. +44(0)191 385 9005

Installation Instructions

VAG 2.0 TDI 170-177PS – CR Tech and Bluespark Pro

Bluespark AUTOMOTIVE

Step 1

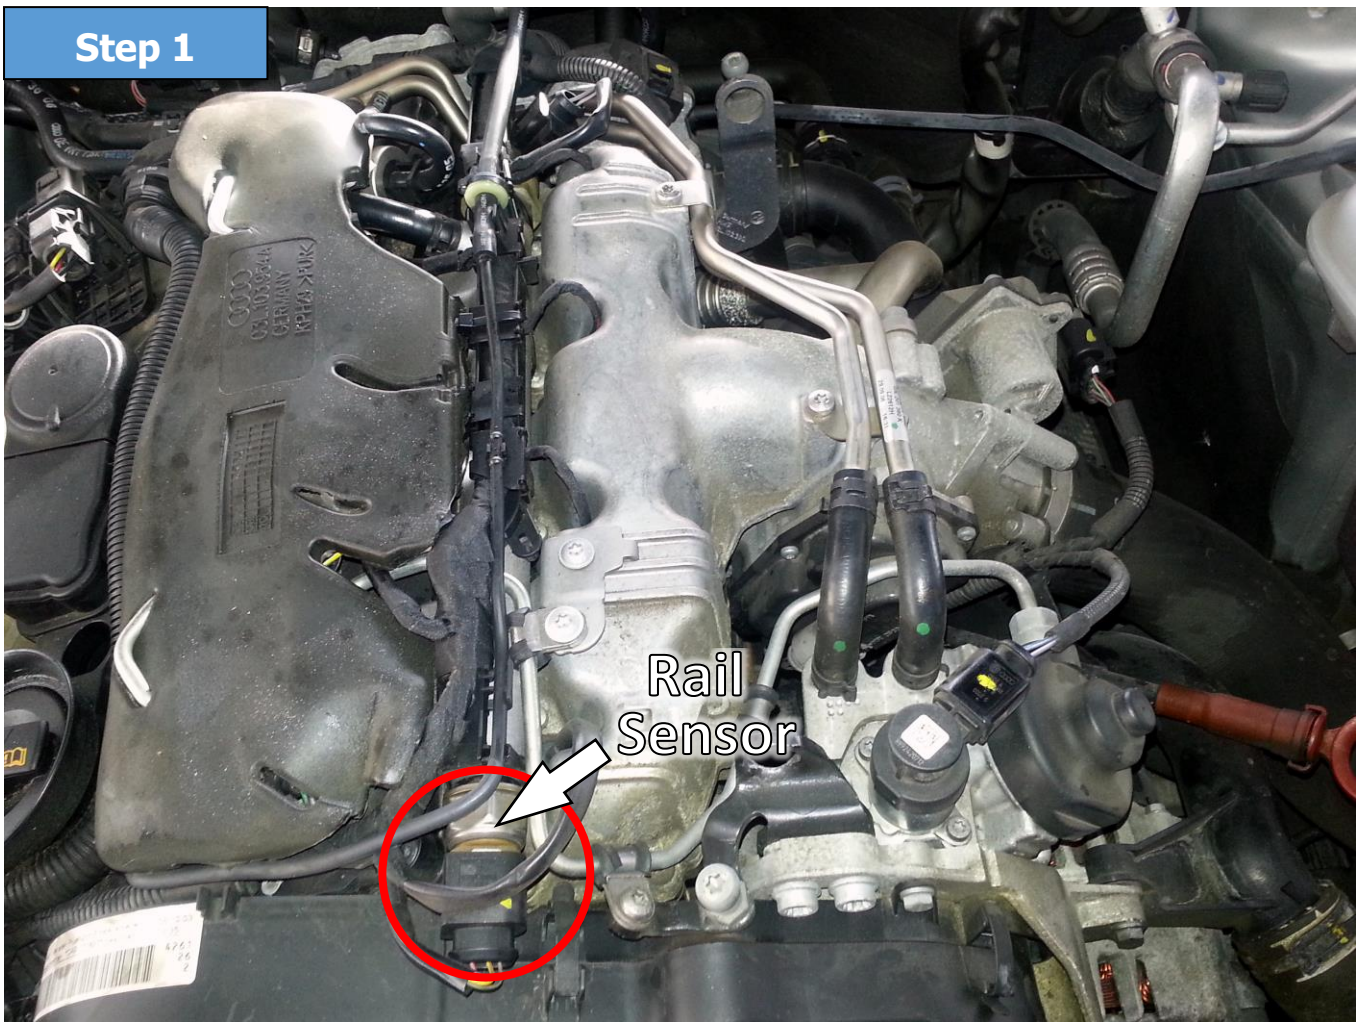

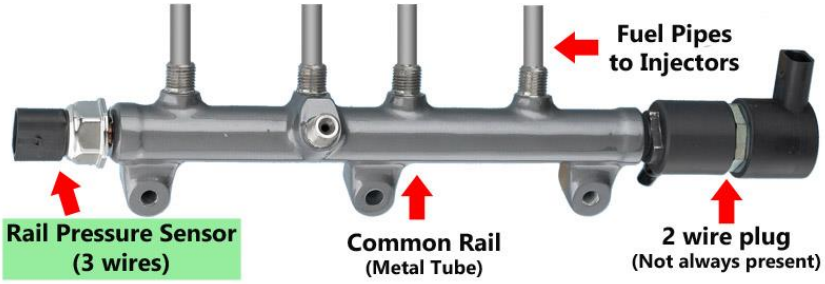

General outlook of the fuel rail in a common rail engine

Copyright 2013 - Bluespark Automotive Ltd. Unit 23A, Dubmire Ind. Est. DH4 5RJ, U.K. +44(0)191 385 9005

Installation Instructions

VAG 2.0 TDI 135-177PS – CR Tech and Bluespark Pro

Bluespark AUTOMOTIVE

Step 2

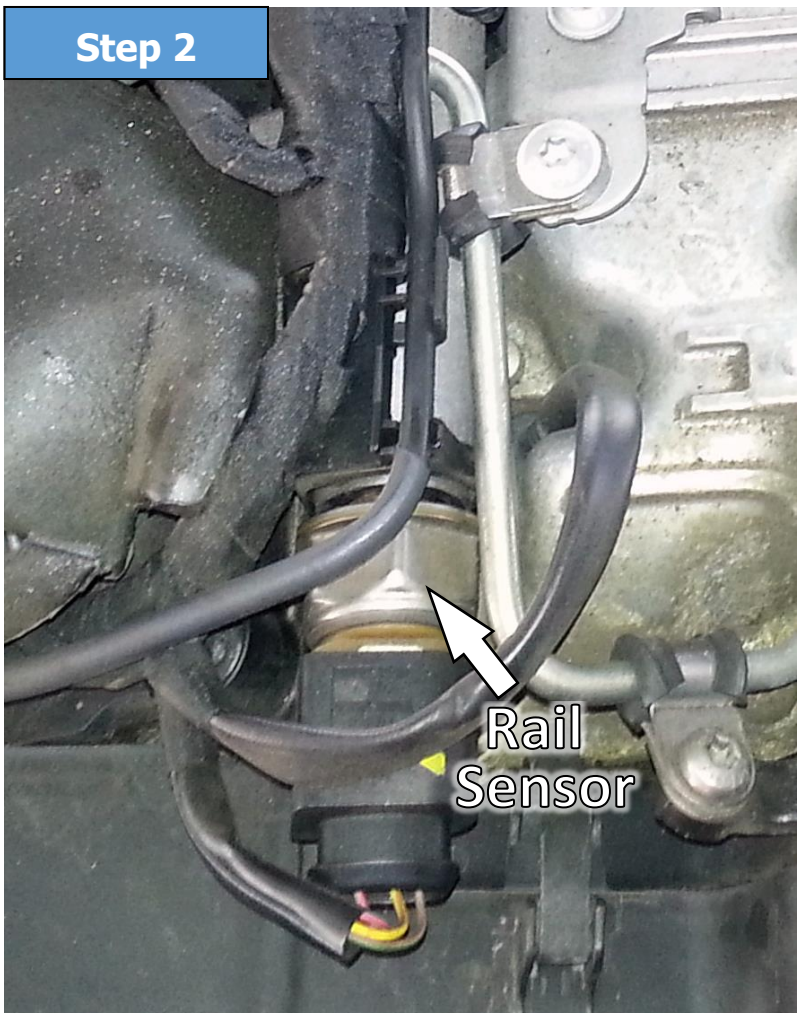

- Unplug the Rail Sensor connector (3 pin) by pulling back on the releasing clip and removing the connector.
- Insert the connector from the Tuning Module's wiring loom onto the Rail Sensor.
- Insert the Vehicle's Rail Sensor connector into the corresponding connector on the Tuning Module's wiring loom.

- With the unit successfully installed please secure the unit and wiring loom within the engine bay, paying attention to the guidelines highlighted on Page 1.

Route the tuning box wiring harness away from sources of heat (exhaust manifolds, EGR pipes, most stainless steel pipes) and also away from any rotating parts such as belts.

- Double check all connections are correct and firmly connected. If this is the case, start the vehicle and ensure there are no engine warning lights or error messages displayed.

If everything is as it should be, please feel free to take the vehicle out for a test drive and enjoy the added responsiveness and power added to your vehicle by the Tuning Module.

Copyright 2013 - Bluespark Automotive Ltd. Unit 23A, Dubmire Ind. Est. DH4 5RJ, U.K. +44(0)191 385 9005